

INSTALLATION INSTRUCTIONS

Please Note Before Installation

Hardware Resource Company (HRC) cannot control the use or installation of add-on, spare, or replacement parts. Therefore, HRC shall have no responsibility for injury or damage resulting from improper installation or other misuse. Parties undertaking use of these parts assume full responsibility for following proper installation procedures.



Instructions for installing replacement connecting hardware kits.

- 1.) Ensure all electrical power and voltage has been turned off, locked off, and tagged out. Do not attempt to install product into a switchboard or panelboard while energized. Installation of this product should be performed by qualified personnel only.
- 2.) After electricity has been locked off and tagged out, confirm that no electrical current is present by using a calibrated voltage detection instrument.
- 3.) Remove dead front cover plates as necessary to gain access to work area.
- 4.) De-energized bus bar should now be exposed. Install the B phase (center phase) connector first. Tighten screws or bolts to finger tight at this point.
- 5.) Install out side phase connector(s), and tighten with fingers.
- 6.) Install bus bar anti-turn devices if provided. (Not all kits utilize anti-turn devices.)
- 7.) Install circuit breaker or switch mounting brackets if provided.
- 8.) If available, place the circuit breaker or switch into its intended location to verify proper alignment and fit. If not available, refer to the attached assembly drawings for proper dimensions and locations of components parts. (Circuit breaker or switch is not included in this kit)
- 9.) After proper alignment has been verified, tighten all bus connections with a calibrated torque wrench to the values listed in table to the right. Check to be sure there are no visible obstructions or foreign materials present that might reduce proper electrical clearances, or damage insulated conductors. Remove any obstructions or foreign materials before continuing.
- 10.) If available, install circuit breaker or switch onto connectors. If not available, go to step 11.
- 11.) Install circuit breaker or switch filler plates when provided. (Some may not be required with twin-mounted breakers)
- 12.) Re-install dead front cover plates. Do not re-energize the switchboard or panelboard without first following all safety and procedural practices necessary to ensure it is safe to re-apply power to the equipment. Only qualified personnel shall re-energize any switchboard or panel board.

Torque Values for Copper or Aluminum Bar Connections		
Bolt Size		Torque
Inch, (mm)		lb, - in.
#10		30
1/4	(6.4)	65
5/16	(7.9)	128
3/8	(9.5)	240
1/2	(12.7)	600

NOTICE

THE USE OF THE ORIGINAL EQUIPMENT MANUFACTURER'S TRADEMARK IS FOR INFORMATIONAL PURPOSES ONLY AND DOES NOT REPRESENT AN ENDORSEMENT OF THIS PRODUCT BY THE MANUFACTURER.

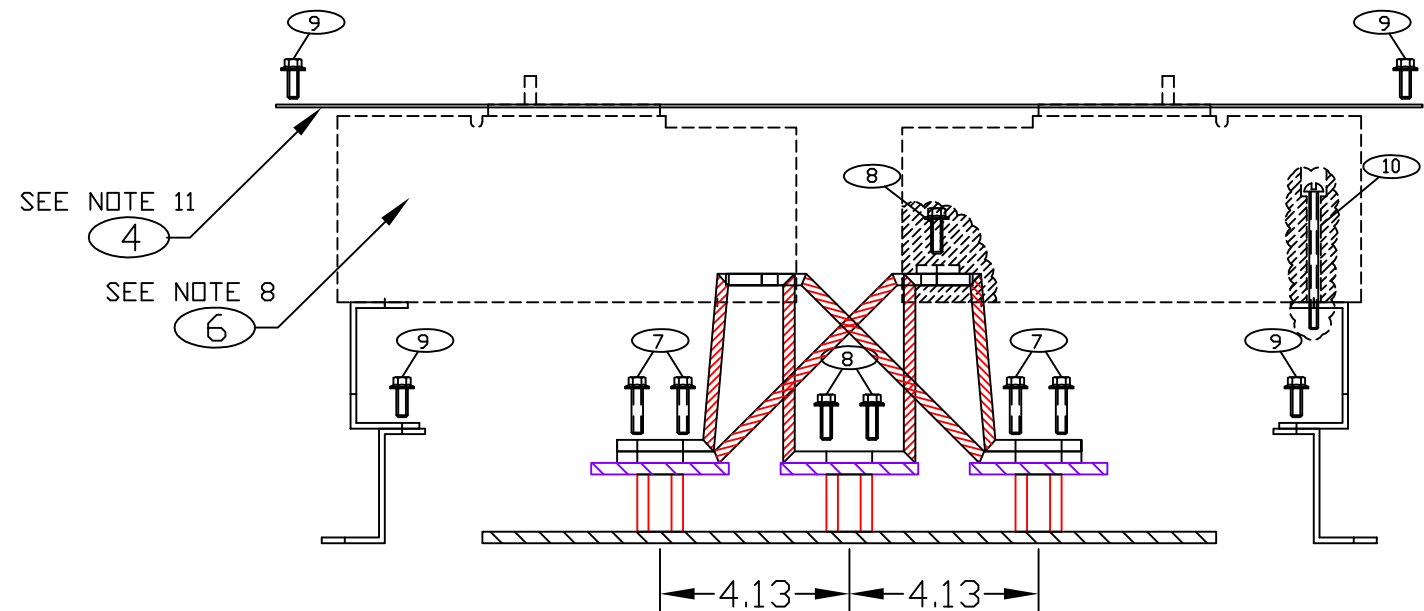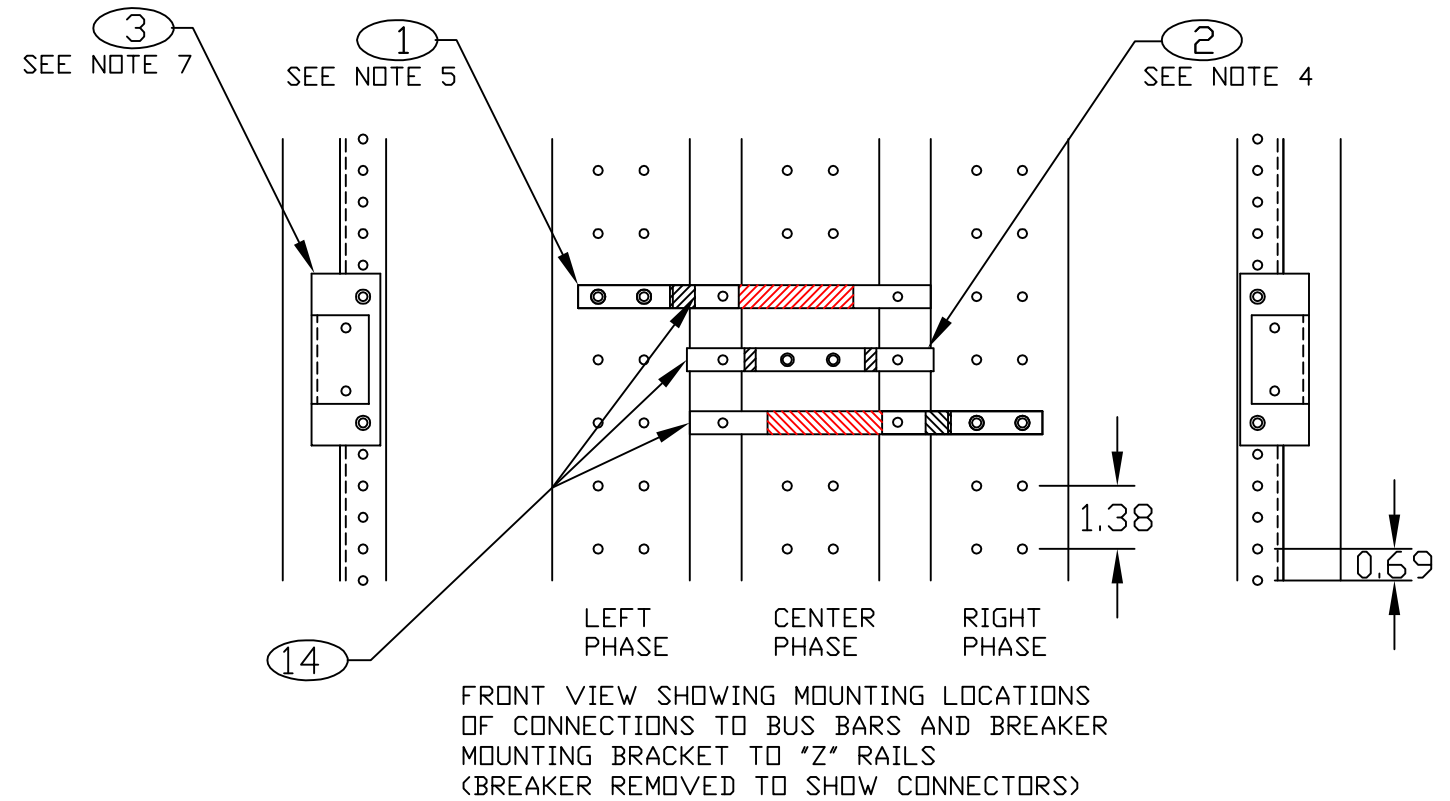

ITEM	QTY.	DESCRIPTION	DWG No.	
1	2	A/C PHASE CONNECTORS	21J-A151JD4-04-01	
2	1	B PHASE CONNECTOR	21J-A151JD4-01-02	
3	2	BREAKER MOUNTING BRACKET	21M-A151JD4-02-03	
4	1	DEAD FRONT/FILLER PLATE	21F-A151JD4-00-04	
5	1	DEAD FRONT/FILLER BLANK	21F-A151JD4-01-05	
6		BREAKER OR SWITCH		
7	6	1/4-20 X .750" SELF TAP BOLT	21H-A151JD4-00	
8	6	1/4-20 X 1.250" SELF TAP BOLT		
9	6	1/4-20 X .625" SELF TAP BOLT		
10	4	1/4-20 X 3.000" ROUND HD SCREW		
11	4	1/4-20 X .500" CARRIAGE BOLT		
12	4	1/4" FLAT WASHERS		
13	4	1/4" STAR HEX NUTS		
14	3	A,B&C PHASE FISH PAPER		21I-FP01-02



TITLE:
CUTLER-HAMMER/WESTINGHOUSE
250AMP MOUNTING HARDWARE FOR
JD, HJD, JDC BREAKERS
IN PRL-4 TYPE PANEL TWIN MOUNT

DRAWING No. 21-A1 LAYER JD4
KIT No. 21-A151JD4-00 REV B

REV-B AA 11-22-05 REV'D DWG. NO. ITEM 5
REV-A AA 06-23-03 ADDED FISH PAPER AND CHANGED DWG. NO. ITEMS 1,2&3