INSTALLATION INSTRUCTIONS

Please Note Before Installation

Hardware Resource Company (HRC) cannot control the use or installation of add-on, spare, or replacement parts. Therefore, HRC shall have no responsibility for injury or damage resulting from improper installation or other misuse. Parties undertaking use of these parts assume full responsibility for following proper installation procedures.


Instructions for installing replacement connecting hardware kits


- Ensure all electrical power and voltage has been turned off, locked off, and tagged out. Do not attempt to install product into a switchboard or panelboard while energized. Installation of this product should be performed by qualified personnel only.
- 2) a calibrated voltage detection instrument After electricity has been locked off and tagged out, confirm that no electrical current is present by using
- $\overset{\circ}{\circ}$ Remove dead front cover plates as necessary to gain access to work area
- <u>4</u> (-Tighten screws or bolts to finger tight at this point. De-energized bus bar should now be exposed. Install the Φ phase (center phase) connector
- <u>ن</u> Install out side phase connector(s), and tighten with fingers.
- 9 Install bus bar anti-turn devices if provided. (Not all kits utilize anti-turn devices.)
- 7.) Install circuit breaker or switch mounting brackets if provided
- 8 If available, place the circuit breaker or switch into its intended location to verify proper alignment and fit. If not available, refer to the attached assembly drawings for proper dimensions and locations of components parts. (Circuit breaker or switch is not included in this kit.
- 9. connections with a calibrated torque wrench to the values listed in table to the right. Check to be sure there are no before continuing. visible obstructions or foreign materials present that might After proper alignment has been verified, tighten all bus conductors. Remove any obstructions or foreign materials reduce proper electrical clearances, or damage insulated
- 10.) If not available, go to step 11 If available, install circuit breaker or switch onto connectors
- 11.) Install circuit breaker or switch filler plates when provided (Some may not be required with twin-mounted breakers)


12.)

shall re-energize any switchboard or panel board. re-apply power to the equipment. Only qualified switchboard or panelboard without first following all safety and procedural practices necessary to ensure it is safe to Re-install dead front cover plates. Do not re-energize the personnel

Torque Alumin	Torque Values for Copper or Aluminum Bar Connections 3olt Size Torque	1 3 7
1~ !!	Bolt Size Inch, (mm)	Torque lb, - in.
#10		30
1/4	(6.4)	65
5/16	(7.9)	128
3/8	(9.5)	240
1	(127)	600

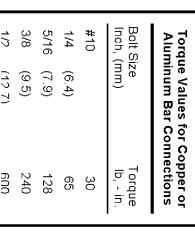

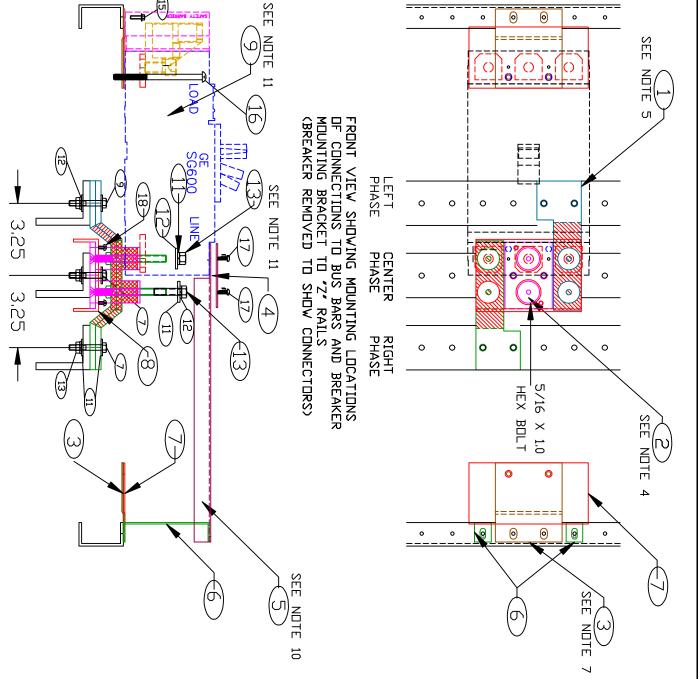

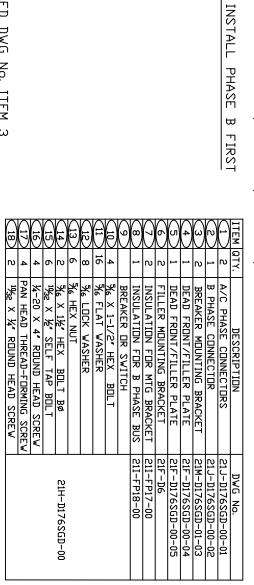

NOTICE

THE USE OF THE ORIGINAL EQUIPMENT MANUFACTURER'S TRADEMARK IS FOR INFORMATIONAL PURPOSES ONLY AND DOES NOT REPRESENT AN ENDORSEMENT OF THIS PRODUCT BY THE MANUFACTURER.

3			
Resource Comp		Į	
Company		'	
			TITLE
IN AVI	SGDA, SG		i

ELECTRIC
MOUNTING HARDWARE F
GHA, SGLA BREAKERS
TYPE PANEL TWIN MOI MUUNT , FUR $\stackrel{\sim}{\Box}$ DRAWING No. 21-D176SGD N_O 21-D6

> LAYER SGD

REV-A ₽ 12-20-12 CHANGED DWG <u>N</u>0 ITEM ω

P.RE